

# 100 Series Float Valve Installation Instructions



1. Remove back nut and slide thread through appropriate sized hole.



2. Screw back nut on by hand.



3. Tighten nut using multi-grips or adjustable wrench.



4. Attach float to threaded end of lever



5. Where necessary bend the lever arm to adjust the water level. This can be done by removing the lever arm assembly by first straightening the tabs on the end of the pivot pin with a pair of pliers then slide it out.



6. Using a pair of multi-grips or equivalent the lever can then be bent to the necessary angle.



7. Adjust the lever arm and then refit. Once the correct lever arm angle is achieved ensure the pivot pin tabs are flared outward by using a small screwdriver.

**Philmac**<sup>®</sup>

The connection you can trust.