

How to install a Philmac Safelok joiner



4. Remove nut and take all components apart, the nut, the split ring and the spacer/oring.



5. Place the components onto the pipe, nut, split ring and then spacer/oring ensuring the correct orientation.



7. Push fitting onto the pipe up to internal wedges.



8. Bring nut components up to the fitting body.




9. Put spacer/oring into the body and pull up split ring to spacer.



10. Bring the nut up to the body and engage nut thread on body thread. Tighten by hand.



11. Tighten with a wrench and ensure all threads are covered and nut is close to flange body.

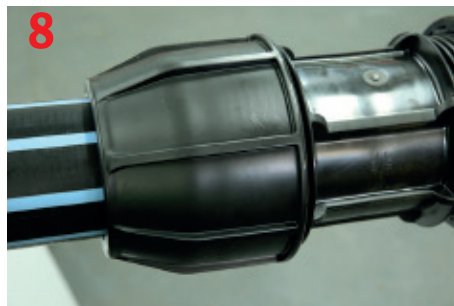

12. Fitting is fully tightened.

For more information visit www.philmac.com.au or call 1800 755 899